
PermaLite® Columns

- Weather Proof
- Insect Proof
- Load Bearing
- Low Maintenance
- Lightweight
- Ready to Prime and Paint
- Limited Lifetime Warranty*



HB&G PermaLite® columns are cost effective, load bearing, versatile, and require very little maintenance. The PermaLite® columns are available in round and square. PermaLite® columns deliver all of the beauty at 1/3 of the weight.

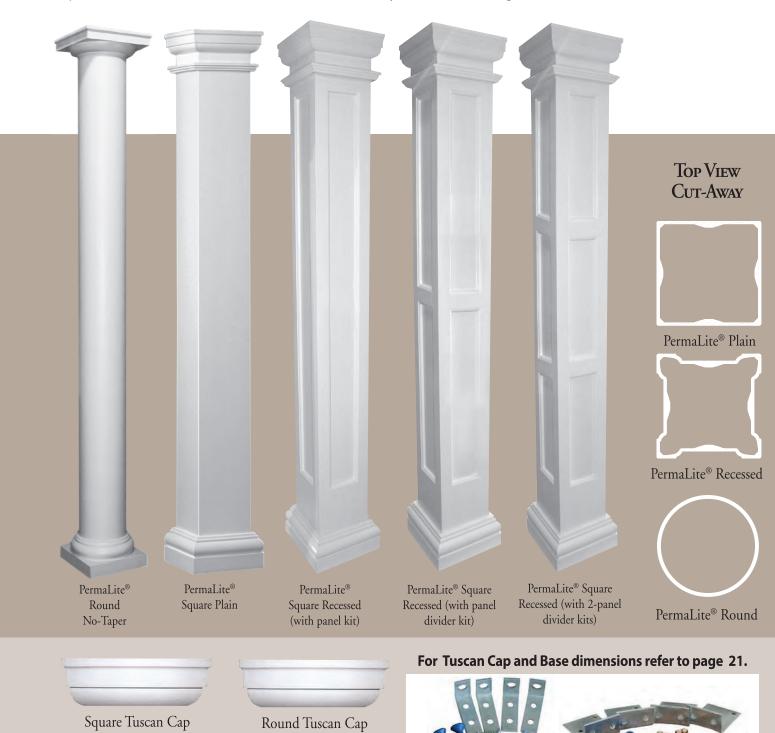

Round Tuscan Base

Square Tuscan Base

A0262080 Installation Kit

for Beveled Cap and Base

(Sold separately)

17040 Standard

Installation Kit

(Sold separately)



PermaLite® Panel Divider Kits to Convert a Single Panel Column into a 2 or 3-Panel Column


RECESSED – Includes four top panel insert pieces and four bottom panel insert pieces.

PANEL DIVIDER KITS are available.

Kit Size	Width	Height
8" Panel Divider Kit (4 Pieces)	4 ⁷ /8"	21/4"
10" Panel Divider Kit (4 Pieces)	5 ⁵ /16"	51/8"

1 panel kit to achieve 2-panel column.

2 panel kits to achieve 3-panel column.

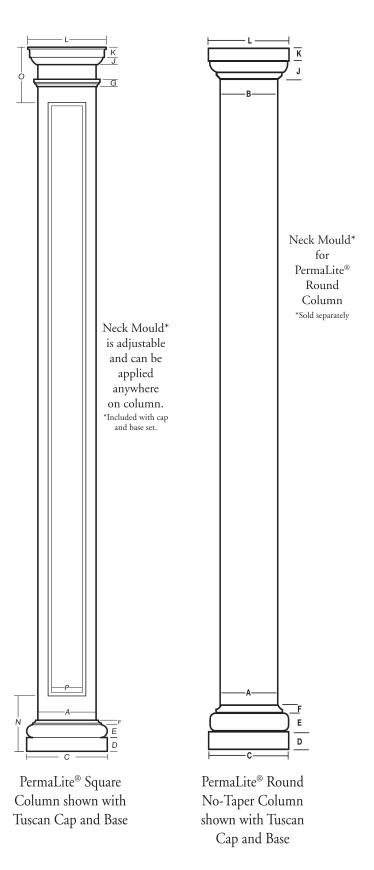

See page 21 for dimension chart.

Plain and Recessed Panel Square PermaLite® Column Dimensions (in Inches)

Col. Size	A	С	D	Е	F	G	J	K	L	N	О	P	Lengths Avail. (ft.)
6"	5-1/2"	8-1/2"	1-1/2"	1-1/4"	1/2"	1-1/4"	7/8"	1-1/16"	8"	N/A	N/A	N/A	6, 8, 9, 10
8"	7-1/2"	10-3/8"	1-7/8"	1-3/4"	5/8"	1-1/4"	1"	1-3/8"	10-1/8"	8"	8"	3-7/8"	689,1012
8"*	7-1/2"	10-7/16"	1-7/8"	1-11/16"	5/8"	1-1/4"	1"	1-3/8"	10-1/4"	8"	8"	3-7/8"	689,1012
10"	9-1/2"	12-15/16"	2-1/2"	2-1/8"	3/4"	1-1/4"	1-5/16"	1-3/4"	12-3/4"	9"	9"	4-3/8"	6,8,9,10,12
10"*	9-1/2"	13-1/8"	2-3/8"	2-1/8"	3/4"	1-1/4"	1-1/4"	1-3/4"	12-3/4"	9"	9"	4-3/8"	6.8.9,10.12
12"	11-1/2"	15-1/4"	2-3/4"	2-7/16"	13/16"	1-1/4"	1-3/8"	2"	15-7/8"	N/A	N/A	N/A	6, 8, 9, 10, 12

- * SIM caps and bases. The remainder are poly caps and bases.


 Recessed panel available.
- See drawing on page 20.

NOTES: Recessed Panel top inset -8"=8", 10"=9"; Bottom inset -8"=8", 10"=9". Neck mould is adjustable and is applied in the field. Recessed Panel available in 8" and 10" sizes only. Factory split PermaLite® columns are not available. HB&G does not recommend splitting PermaLite® columns.

SQUARE PERMALITE® INSIDE DIMENSION

*Recessed Panel Inside Dimensions 8"- 5-5/8"; 10"- 7-5/8"

Col. Width	Inside
6"	4-5/8"
8"	6-5/8"*
10"	8-5/8"*
12"	10-5/8"

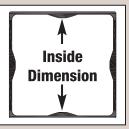

COLONIAL SQUARE CAP AND BASE FOR PERMALITE®

Col. Size	С	D	E	F	J	K	L	R
6"	8-1/8"	1-1/4"	1-1/16"	7/16"	5/8"	1"	7-7/16"	2-3/4"
8"	10-1/8"	1-1/4"	1-1/16"	7/16"	1-5/16"	1"	9-7/16"	2-3/4"
10"	12-1/8"	1-1/4"	1-1/16"	7/16"	1-5/16"	11/4"	12-1/8"	2-3/4"
12"	14-1/8"	1-1/4"	1-1/16"	7/16"	1"	13/8"	14-1/8"	2-3/4"

- Neck moulding is 4 pieces included with the cap and base.
- See drawings on page 20.

Round PermaLite® No-Taper Column Dimensions										
Col. Size	A	В	С	D	E	F	J	K	L	Lengths
8"	7-5/8"	7-5/8"	10-1/2"	1-7/8"	1-3/4"	3/4"	1-1/4"	1-1/2"	10-5/8"	8',9',10'
10"	9-5/8"	9-5/8"	13-1/8"	2-3/8"	2-1/8"	3/4"	1-1/4"	2"	12-3/4"	8',9',10',12'

ROUND PERMALITE® DIMENSIONS

Inside diameter may vary up to 1/8".

COLUMN SIZE	ID
8"	7-3/8"
10"	9-3/8"



One Piece Neck Mould for 8" and 10" Round No-Taper Column Is Available. Neck Ring Sold Separately.

Beveled Cap & Base Set

Size	A	В	С	
6"	5-1/2"	7-5/8"	3-1/2"	
8"	7-1/2"	9-5/8"	3-1/2"	
10"	9-1/2"	11-5/8"	5-1/2"	
12"	11-1/2"	13-5/8"	5-1/2"	

*For Square PermaLite® Columns

See Installation Kit on page 19.

